

# STRUKTUURI

SIPARILA WOOD FOR LIVING

Maintenance Guide



## MAINTENANCE INSTRUCTIONS

- Dirty surfaces can be cleaned with a wet cloth and regular household detergent diluted with water according to the detergent instructions.
- Abrasive cleaning agents are not recommended.
- Persistent stains that do not respond to water cleaning can be removed with mild solvents like white spirit or mild alcohol-based cleaning agents. Wet the cloth with the solvent and wipe gently.
- Please note that solid solvents like acetone and turpentine should be avoided, as these substances may soften the original surface treatment.

## MAINTENANCE PAINTING

- Begin by thoroughly cleaning the surface that requires treatment.
- Prior to applying the maintenance paint, please verify that the color is appropriate by testing it on a discreet section of the surface. Apply a thin layer of the surface treatment agent. To achieve a darker shade, consider applying additional layers as needed.
- It is essential to carefully follow instructions of the maintenance product.

## RECOMMENDED PRODUCTS

- CLEAN WHITE
  - Tikkurila Helmi 10 multipurpose furniture paint
- TRANSLUCENT SAND
  - Wet areas: Tikkurila Supi Saunasuoja TVT3440, tintable acrylic protective agent.
  - Dry areas: Tikkurila Kiva multipurpose furniture-lacquer tone TVT3440
- TRANSLUCENT BLACK
  - Wet areas: Tikkurila Supi Saunasuoja TVT3445, tintable acrylic protective agent.
  - Dry areas: Tikkurila Kiva multipurpose furniture-lacquer tone TVT3445
- PEARLY GRAY
  - Dry areas: Tikkurila Taika Glaze according to Taika Color Chart (indicative tone TVT5153 without pearly shine)
  - Wet areas: Please contact your supplier.
- PEARLY BROWN
  - Dry and wet areas: Please contact your supplier.